

開關構造說明 (Switch Construction Instructions)

緊急停止開關 (Emergency Stop Switches)

A20

緊急停止開關
(Emergency Stop Switches)
Page.21



緊急停止開關操作部
(Emergency Stop Switches
Operators)
Page.120



開關接點部
(Contact Block
Assemblies)
Page.137-140



接點塊安裝轉接器
(Contact Block
Mounting Adapter)
Page.140



接點塊
(Contact Block)
Page.139



接點塊
(Contact Block)
Page.139



接點塊
(Contact Block)
Page.139

緊急停止開關 (Emergency Stop Switches)


φ 40mm 蘑菇頭形 (Mushroom φ 40mm)

20B



燈泡 (Illumination Type)	動作類型 (Operation)	接點結構 (Contacts)	型號 (Type No.)	使用電壓記號 (Operating Voltage Code)	顏色記號 (Lens Color Code)
無 (Without Lamp)	按鎖定拉出 或旋轉復歸 (Pushlock Pull/Turn Reset)	1NO	A20B-V4E10R	無燈泡 (Without Lamp)	僅紅色 (Red only)
		1NC	A20B-V4E01R		
		2NO	A20B-V4E20R		
		2NC	A20B-V4E02R		
		3NO	A20B-V4E30R		
		3NC	A20B-V4E03R		
		1NO-1NC	A20B-V4E11R		
		1NO-2NC	A20B-V4E12R		
		2NO-1NC	A20B-V4E21R		

■外型尺寸(Dimensions) mm

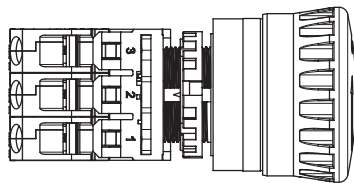

面板厚度 (Panel Thickness)
0.8~6

