

C1S 型 按鈕開關 (Pushbuttons)

C1S04

C1S04 鎖定旋轉復歸型按鈕開關
(C1S04 Pushlock Turn Clockwise to Reset Pushbuttons)



操作類型 (Operation)	使用電壓 (Operating Voltage)	接點結構 (Contacts)	型號 (訂購型號) (Type No.)		顏色記號 (Colors)	備註 (Notes)
			閉鎖型 (IP40)	防水型 (IP65)		
按鎖定旋轉 復歸型 (Pushlock turn clockwise to reset)	無 (Without Lamps)	SPDT	C1S04-MC11R-H11	C1S04-MC21R-H11	僅紅色 Red Only	
		DPDT	C1S04-MC11R-H10	C1S04-MC21R-H10		

• C1S04 型開關不能作為緊急停止開關使用。(Do not use C1S04 pushbuttons as emergency stop switches.)

■ 外型尺寸圖 (Dimensions) (mm)

